























3200W Intelligent Single Output Battery Charger











# ■ Features

- · Charger for lead-acid batteries (Gel, flooded and AGM) and Li-ion batteries (lithium iron and lithium manganese)
- Built-in default 3 stage charging curves and programmable curve
- Built-in I<sup>2</sup>C interface, PMBus protocol (Optional CANBus protocol)
- Universal AC input / Full range
- Built-in active PFC function
- · Forced air cooling by built-in thermal controlled DC fans
- · Output voltage and current programmable
- Built-in OR-ing FET
- Active current sharing up to 6400W(1+1)
- Protections: Battery under voltage / Battery no connection / Short circuit / Over voltage / Over temperature
- · Optional conformal coating
- 5 years warranty

# Applications

- · Large scale DC UPS or emergency backup system
- · Marine battery charger module
- Electric scooter or vehicle charger station
- Wastewater treatment system
- Electrolysis system


### GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

# Description

DBU-3200 is a 3200W single output AC/DC enclosed charger in 1U low profile with high power density, 37W/inch3. It is an intelligent charger that has pre-loaded programmable charging curves for different types of lead-acid and li-ion batteries. Output programmable function allows user to adjust the charging voltage and current via the built-in potentiometer or PMBus protocol. Various protection mechanisms as well as the temperature compensation function are provided to assure normal and safe system operation.

# ■ Model Encoding / Order Information

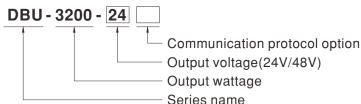

Type	Communication Protocol	Note
Blank	PMBus protocol	In Stock
CAN	CANBus protocol	By request




# **SPECIFICATION**

MODEL		DBU-3200-24		DBU-3200-48		
	BOOST CHARGE VOLTAGE(Vboost)(default)	28.8V		57.6V		
	FLOAT CHARGE VOLTAGE(Vfloat)(default)			55.2V		
	CONSTANT CURRENT(CC)(default)	110A		55A		
	( // /	By built-in potentiometer, SVR				
OUTPUT	VOLTAGE ADJ. RANGE	23.5 ~ 30V		47.5 ~ 58.8V		
	RECOMMENDED BATTERY					
	CAPACITY(AMP HOURS) Note.3	330 ~ 1000Ah		180 ~ 550Ah		
	LEAKAGE CURRENT FROM					
	BATTERY (Typ.)	1.5mA				
		90 ~ 264VAC 127 ~ 370VDC				
	FREQUENCY RANGE	47 ~ 63Hz				
	POWER FACTOR (Typ.)	0.97/230VAC at full load				
INPUT	EFFICIENCY (Typ.)	93.5%		94.5%		
	AC CURRENT (Typ.) Note.4					
	INRUSH CURRENT (Typ.)	COLD START 55A/230VAC				
	LEAKAGE CURRENT	<2mA/230VAC				
	ELMOTOL CONTRACTOR	31.5 ~ 37.5V		63 ~ 75V		
DDOTECTION	OVER VOLTAGE		ro nower on to recover	03 134		
PROTECTION	OVER TEMPERATURE	Protection type: Shut down o/p voltage, Shut down o/p voltage, recovers automa	· · · · · · · · · · · · · · · · · · ·	roes down		
	OUTPUT VOLTAGE PROGRAMMABLE(PV)			*	ease refer to the Function Manual	
	OUTPUT VOLTAGE PROGRAMMABLE(PV)					
	( )	5V @ 0.3A, tolerance ±10%, ripple 150				
FUNCTION	AUXILIARY POWER REMOTE ON-OFF CONTROL	By electrical signal or dry contact Pow			· ·	
		-3mV / °C / cell / (12V = 6 cells ; 24V = 1		r.open. Flease felel t	o the Function Manual	
	ALARM SIGNAL	Isolated signal output for T-alarm and DC	<u> </u>			
	WORKING TEMP.	-	5-UK			
		-30 ~ +70°C (Refer to "Derating Curve")  20 ~ 90% RH non-condensing				
ENVERONMENT	WORKING HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing				
ENVIRONMENT	TEMP. COEFFICIENT	±0.03%/°C (0 ~ 50°C)				
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes				
		UL62368-1, CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, EAC TP TC 004 approved				
	SAFETY STANDARDS WITHSTAND VOLTAGE			AC TE TO 004 approve	34	
	ISOLATION RESISTANCE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C/ 70% RH				
	ISOLATION RESISTANCE	Parameter	Standard		Test Level / Note	
		Conducted	BS EN/EN55032 (CIS	SPR32)	Class B	
	EMC EMISSION	Radiated	BS EN/EN55032 (CIS	,	Class A	
	LING LINISSION	Harmonic Current	BS EN/EN61000-3-2		Class A	
		Voltage Flicker	BS EN/EN61000-3-3			
SAFETY &		BS EN/EN55035, BS EN/EN61000-6-2	BO 214/21401000 0 0	<u>'</u>		
EMC		Parameter	Standard		Test Level / Note	
(Note 6)		ESD	BS EN/EN61000-4-2		Level 3, 8KV air ; Level 2, 4KV contact	
		Radiated	BS EN/EN61000-4-3		Level 3	
		EFT / Burst	BS EN/EN61000-4-4		Level 3	
	EMC IMMUNITY	Surge	BS EN/EN61000-4-5		2KV/Line-Line 4KV/Line-Earth	
		Conducted	BS EN/EN61000-4-6		Level 3	
		Magnetic Field	BS EN/EN61000-4-8		Level 4	
		Voltage Dips and Interruptions	BS EN/EN61000-4-1		>95% dip 0.5 periods, 30% dip 25 period >95% interruptions 250 periods	
	MTBF	494.2K hrs min. Telcordia SR-332 (Be	allcore) : 11 8K hrs min	MII _HDRK_217E (25		
OTHERS	DIMENSION			, , ,		
- IIILINO	PACKING	325.8*107*41mm (L*W*H) 2.76Kg;4pcs/12Kg/0.83CUFT				
NOTE  1. Modification for charger specification may be required for different battery specification. Please contact battery vendor and MEAN WEL 2. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.  3. This is MEAN WELL's suggested range. Please consult your battery manufacturer for their suggestions about maximum charging curre 4. Derating may be needed under low input voltages. Please check the derating curve for more details.  5. The charger is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mountin a 600mm*900mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For a perform these EMC tests, please refer to "EMI testing of component power supplies."  (as available on https://www.meanwell.com//Upload/PDF/EMI_statement_en.pdf)  6. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher Product Liability Disclaimer: For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx		ature.  ximum charging current limitation.  executed by mounting the unit on  EMC directives. For guidance on how to  erating altitude higher than 2000m(6500ft)				




### **■ BLOCK DIAGRAM**

PFC fosc: 110KHz PWM fosc: 90KHz

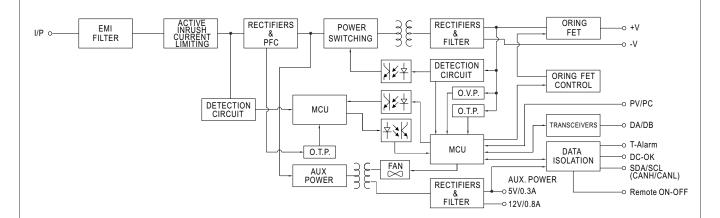

### **■** DERATING CURVE

# **■ STATIC CHARACTERISTICS**

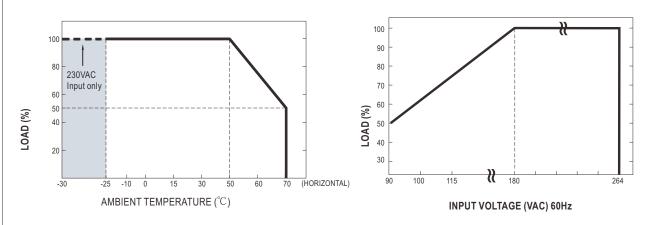




### **■ FUNCTION MANUAL**

### 1.PMBus Communication Interface

DBU-3200 supports PMBus Rev. 1.1 with maximum 100KHz bus speed, allowing information reading, status monitoring, output trimming, etc. For details, please refer to the Installation Manual.

### 2. Charging Curve

- 💥 By factory default, this charger performs the default curve which can be programmed via PMBus.
- \*\* To disable / enable the charging curve, change to a 2 stage curve, a different curve frequently used for certain types of batteries in the industry, and so on, please refer to the Installation Manual.
- X To program the parameters of the charging curve, SBP-001, the smart battery charging programmer designed by MEAN WELL, and a personal computer are needed. Please contact MEAN WELL for details.

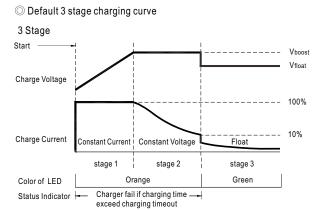

# © Suitable for lead-acid batteries (flooded, Gel and AGM) and Li-ion batteries (lithium iron and lithium manganese).

### © Embedded 3 stage charging curves

MODE	L Description	Vboost	Vfloat	CC(default)	
	Default, programmable	28.8	27.6		
24V	Pre-defined, gel batter	28	27.2	1104	
24 V	Pre-defined, flooded battery	28.4	26.8	110A	
	Pre-defined, AGM battery	29	27		
	Default, programmable	57.6	55.2		
48V	Pre-defined, gel batter	56	54.4	55A	
400	Pre-defined, flooded battery	56.8	53.6	DOA	
	Pre-defined, AGM battery	58	54		

#### Note:


When using this charger unit, please configured the system with recommended battery capacity defined by specification. Should battery capacity in use be much smaller so that user needs to set a low current for charging, under such condition it might cause higher current ripple.


### 3. Front Panel LED Indicators & Corresponding Signal at Function Pins

LED	Description	
Green Float (stage 3)		
Orange	Orange Charging (stage 1 or stage 2)	
<ul> <li>Red The LED will present a constant red light when the abnormal status (OTP, OLP, fan fail and charging timeout) arises.</li> </ul>		
Red (Flashing)  The LED will flash with the red light when the internal temperature reaches 60°C; under this condition, the unit still ope		
Red (Flashling)	without entering OTP. (In the meantime, an alarm signal will be sent out through the PMBus interface.)	

4. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)

※ In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed by applying EXTERNAL VOLTAGE.

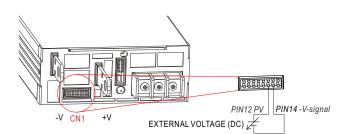


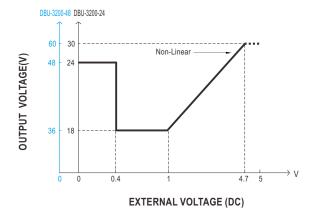




### 5. Output Current Programming (or, PC / remote current programming / dynamic current trim)


% The output current can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

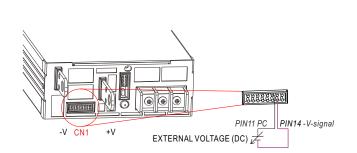

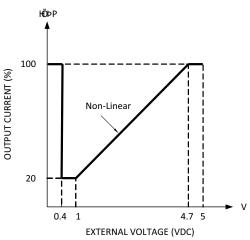


### 6. Remote ON-OFF Control

The power supply can be turned ON/OFF individually or along with other units in parallel by using the "Remote ON-OFF" function.

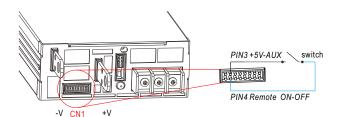


Between Remote ON-OFF and +5V-AUX	Power Supply Status
Switch Short	ON
Switch Open	OFF

### 7. Temperature Compensation

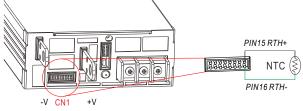

- To exploit the temperature compensation function, please attach the temperature sensor, NTC, which is enclosed with the charger, to the battery or the battery's vicinity.
- The charger is able to work normally without the NTC.

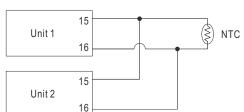


When multiple chargers are connected in parallel, please configure with the NTC as exhibited in the diagram .

If the temperature compensation is not required, RTH+ (PIN15) and RTH- (PIN16) from each unit still need to be connected.

### 8. Alarm Signal Output

\*\* There are 2 alarm signals, DC OK and T-ALARM, in TTL signal form, on CN1. These signals are isolated from output. The maximum sink current is 10mA.

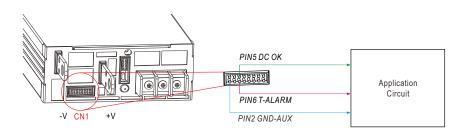




### 9. Current Sharing


DBU-3200 has the built-in active current sharing function and can be connected in parallel, up to 2 units, to provide higher output power as exhibited below:

- X The power supplies to be paralleled should use short and large diameter wiring and then connected to the load.
- $\fint \%$  Difference of output voltages among parallel units should be less than 0.2V.
- The total output current must not exceed the value calculated by the following equation: 
   Maximum output current at parallel operation=(Rated current per unit) × (Number of unit) × 0.9
- When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit) 
   ≺ (Number of unit) 
   the current shared among units may not be balanced.
- ※ CN500/SW1 Function pin connection

Parallel -	PSU1		PSU2	
	CN500	SW1	CN500	SW1
1 unit	Х	ON	_	_
2 unit	V	ON	V	ON

(V: CN500 connected; X: CN500 not connected.)

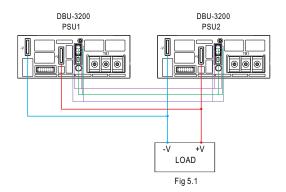


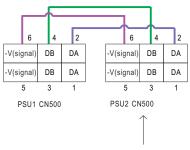

If the lines of CN500 are too long, they should be twisted in pairs to avoid the noise.

O DA, DB and -V(signal) are connected mutually in parallel.



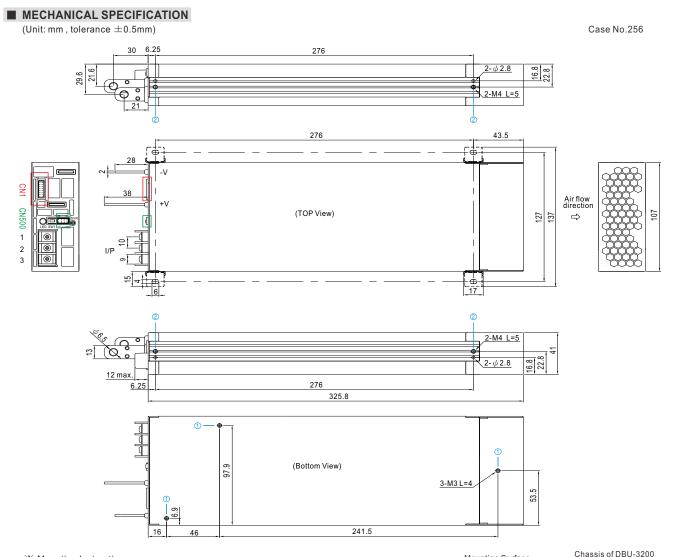

**X** Mounting Instruction

	/•< WOUII	Nounting moderation				
Hole No. Recommended Screw Size		Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque		
	1 M3		4mm	6~8Kgf-cm		
	② M4		5mm	7~10Kgf-cm		

Chassis of DBU-3200 Mounting Surface Mounting Screw

 $\fint \cite{MCONTOLER}$  Control Pin No. Assignment (CN1): HRS DF11-16DP-2DS or equivalent



Mating Housing	HRS DF11-16DS or equivalent	
Terminal	HRS DF11-**SC or equivalent	

Pin No.	Function	Description	
1	+12V-AUX	Auxiliary voltage output, 10.6~13.2V, referenced to GND-AUX (pin2).  The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF".	
2	GND-AUX	GND-AUX Auxiliary voltage output GND. The signal return is isolated from the output terminals (+V & -V).	
3	+5V-AUX	Auxiliary voltage output, 4.5~5.5V, referenced to GND-AUX (pin2).  The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF	
4	Remote ON-OFF	The unit can turn the output ON/OFF by electrical signal or dry contact between $Remote\ ON/OFF\ $ and $+5V-AUX$ . (Note.2) Short $(4.5\sim5.5V)$ : Power ON; Open $(-0.5\sim0.5V)$ : Power OFF; The maximum input voltage is $5.5V$ .	
5	5 DC-OK High (3.5 ~ 5.5V): When the Vout ≤16V/32V ±1V. Low (-0.5 ~ 0.5V): When Vout ≤16V/32V ±1V. The maximum sourcing current is 10mA and only for output. (Note.2) DC OK is associated with battery low protection.		
6	T-ALARM	High (3.5 ~ 5.5V): When the internal temperature exceeds the limit of temperature alarm, or when Fan fails.  Low (-0.5 ~ 0.5V): When the internal temperature is normal, and when Fan works normally.  The maximum sourcing current is 10mA and only for output(Note.2)	
7,8,9	A0,A1,A2	PMBus interface address lines. (Note.1)	
10	D0	DIP-switch interface lines for charging curve selection. (Note.1)	
11	PC	Connection for output current programming. (Note.1)	
12	PV	Connection for output voltage programming. (Note.1)	
13	+V (Signal)	Positive output voltage signal. It cannot be connected directly to the load.	
14	-V (Signal)  Negative output voltage signal. It is for certain function reference; it cannot be connected directly to the load.		
15	RTH+	Temperature sensor(NTC, 5KOhm) comes along with the charger can be connected to the unit to allow temperature	
16	RTH-	compensation of the charging voltage.	

Note1: Non-isolated signal, referenced to the [-V(signal)]. Note2: Isolated signal, referenced to GND-AUX.



# 3200W Intelligent Single Output Battery Charger

DBU-3200 series

 $\frak{\ensuremath{\mbox{\sc MAC}}}$  Input Terminal Pin No. Assignment

Pin No.	Assignment	Diagram	Maximum mounting torque
1	FG ±	1 2 3	
2	AC/N		8Kgf-cm
3	AC/L		

 $\% Control\, Pin\, No.\, Assignment (CN500): HRS\, DF11-8DP-2DS\, or\, equivalent$ 

8	2	
00	00	
7	1	

Mating Housing	HRS DF11-8DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description
1, 2	DA	Differential digital signal for parallel control.
3, 4	DB	Differential digital signal for parallel control.
5, 6	-V (Signal)	Negative output voltage signal. It is for local sense; and certain function reference; it cannot be connected directly to the load.
	NC	For standard model: None.
7	SDA	For PMBus model: Serial Data used in the PMBus interface. (Note)
	CANH	For CANBus model: Data line used in CANBus interface. (Note)
	NC	For standard model: None.
8	SCL	For PMBus model: Serial Clock used in the PMBus interface. (Note)
	CANL	For CANBus model: Data line used in CANBus interface. (Note)

Note: Isolated signal, referenced to GND-AUX.

\*Control Pin No. Assignment.(SW1)

Pin No.	Function	Description
1, 2	Terminal resistance	SW1 is the selector of terminal resistor that is designed for DA/DB signals and parallel control function.

# ■ INSTALLATION MANUAL

Please refer to : http://www.meanwell.com/manual.html